

SHARP • Roku TV

UHD CLASS
75" (74.5" Diagonal)

LC-75LBU711C

QUICK SETUP GUIDE

1 START HERE

How do I attach the stands to my TV? (not for wall mounting)


You'll need: Phillips screwdriver and a soft surface to lay your TV on.

Carefully place your TV face-down on a cushioned, clean surface.

Align the TV stands with the screw holes on the bottom of your TV. The stands are labeled L (left) and R (right).

Make sure that the stands are on the correct sides.

Secure the stands to your TV with the four provided screws.

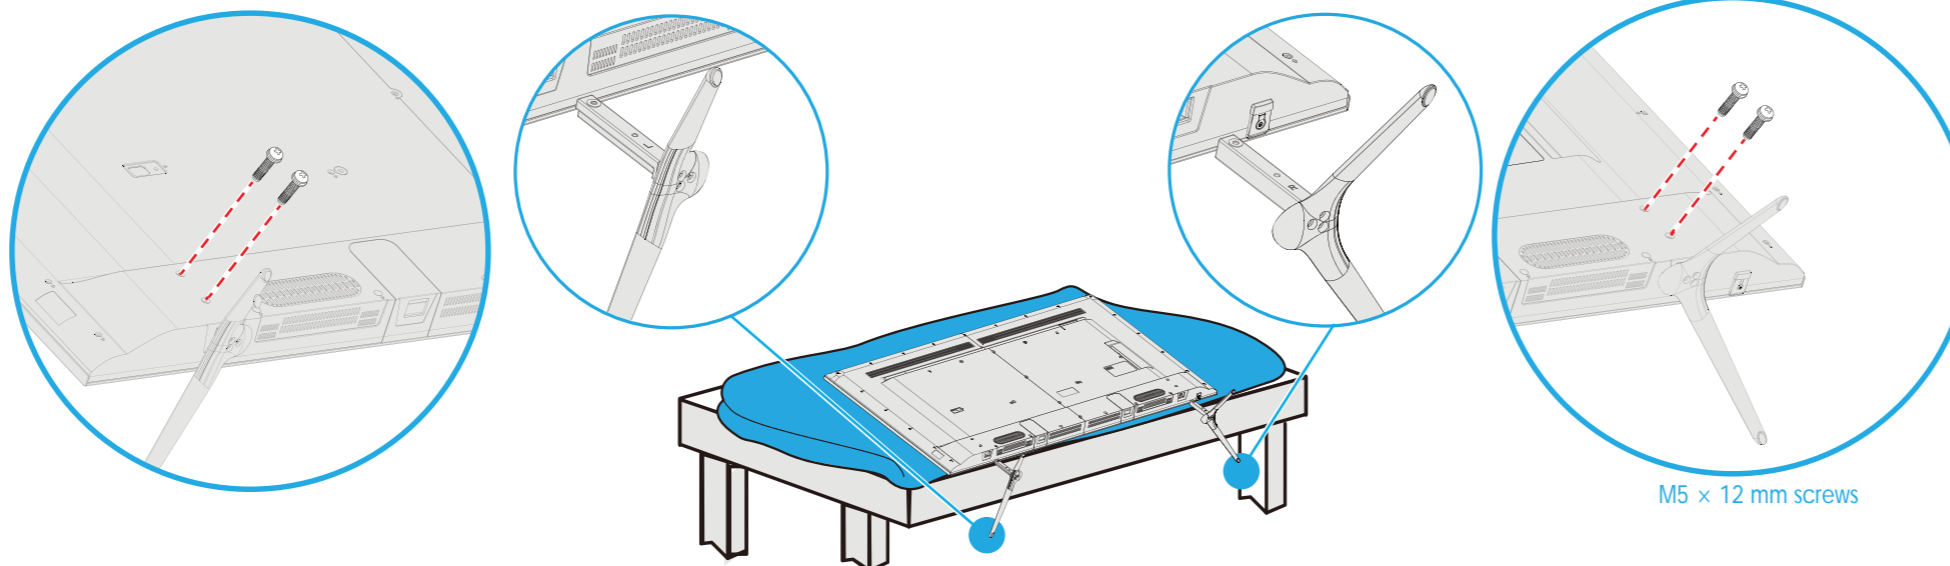


How do I prepare my TV for wall mounting?
(not for use with the TV stands)

You'll need: Phillips screwdriver and a soft surface to lay your TV on.

Carefully place your TV face-down on a cushioned, clean surface.

Remove the two screws on the back of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.

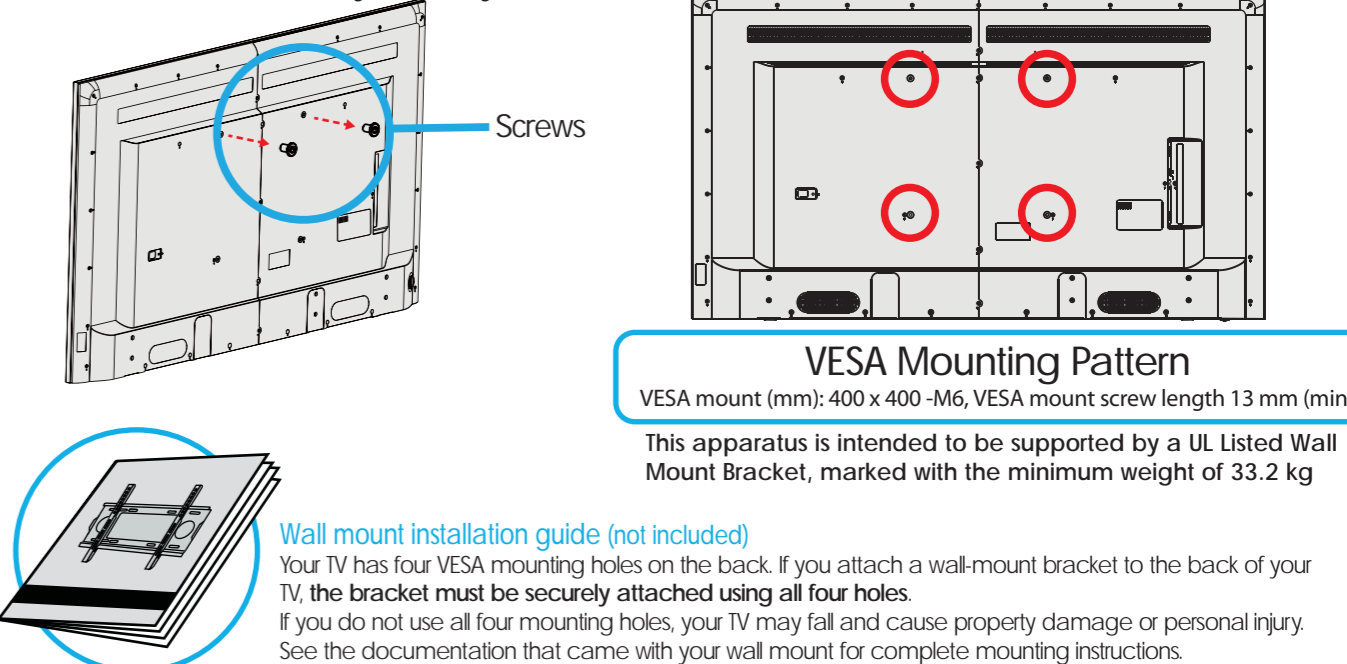


STOP!
Do not plug your power cord in until all other devices are connected.


Included accessories




Remote control and two AAA batteries

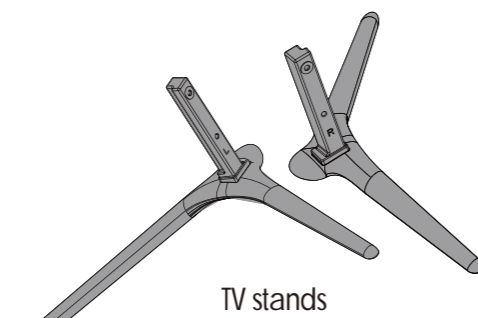

TV stands

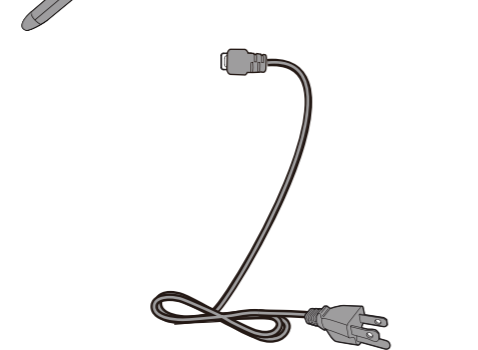

Power cord

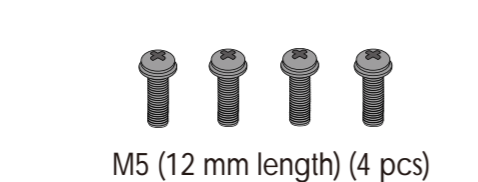


M5 (12 mm length) (4 pcs)


What you need (not included)



A Phillips screwdriver

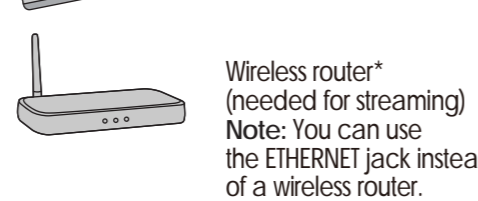

 Wireless router* (needed for streaming)
Note: You can use the ETHERNET jack instead of a wireless router.



Internet connection* (needed for streaming)

* Subscription or other payment may be required to access certain content. A computer, tablet, or smartphone is needed for setup.


Features

Front view



INPUT
Power indicator
Remote control sensor

Back view

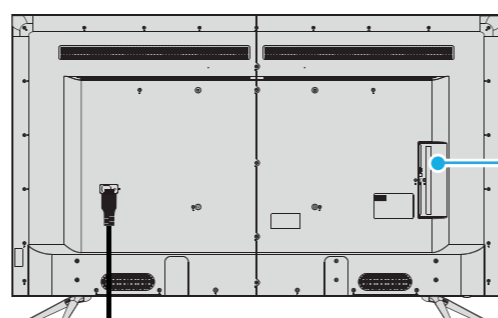


Power connector




2 MAKING CONNECTIONS

How do I watch TV or connect a device such as a DVD or Blu-ray disc player, game console, or tablet?

Using an HDMI cable (BEST)

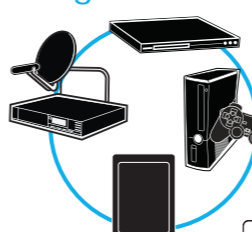


Multi-purpose jack: You can plug any device that uses HDMI into any HDMI jack. However, certain devices must be connected to the HDMI 1 (ARC) jack. See the instructions that came with your ARC-enabled device for more information.

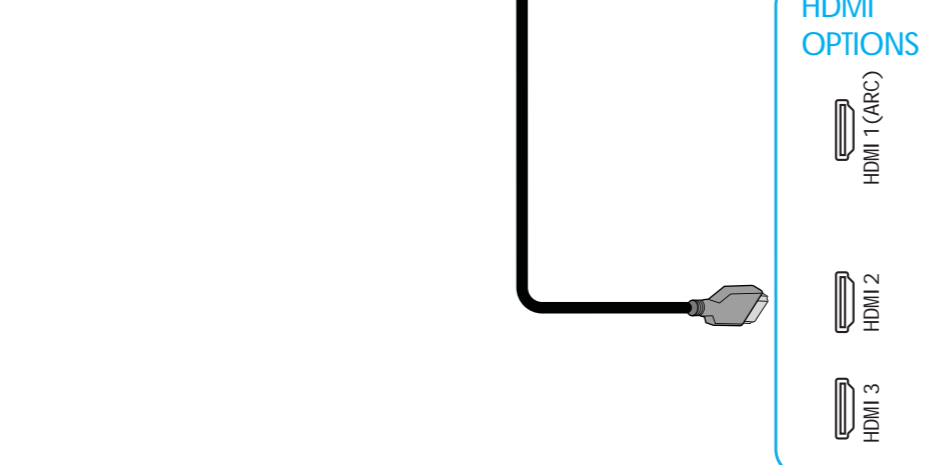

Using an AV cable (GOOD)



Using a coaxial cable (GOOD)

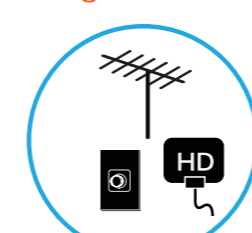

Connect an antenna to access live over-the-air TV



 
AUDIO OPTIONS

Connecting my TV to external speakers.

USING DIGITAL AUDIO




USING ANALOG AUDIO*



USING ANALOG AUDIO



*Note: If the volume on the device connected to the analog audio jack are too low, try increasing the volume on your TV.

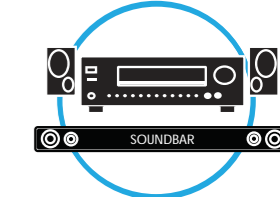

ETHERNET (OPTIONAL)



Note: You have to connect to either a LAN or Wi-Fi to access the internet. See the back for additional information.

Note: Images do not necessarily represent the exact design of your TV. Before using your new product, please read these instructions to prevent any damage.



FIND YOUR USER GUIDE ONLINE!

 
We are going green so a copy of your User Guide is not provided in the box but is available online. Go to: <https://www.sharptvusa.com/support> Find your model. Under Owners Manual, find the language you want, then select Download. Your online User Guide opens.




3 TURNING ON MY TV

When can I turn on my TV?

The best time to turn on your TV is after you have connected all devices and either attached the TV stands or wall-mounted your TV.

When your TV is in place:

- 1 Plug one end of the power cord into the power connector on the back of your TV and the other end into a power outlet.
- 2 Remove the remote control cover and install the batteries.
- 3 Press  (power) on your remote control.
- 4 Follow the on-screen instructions.

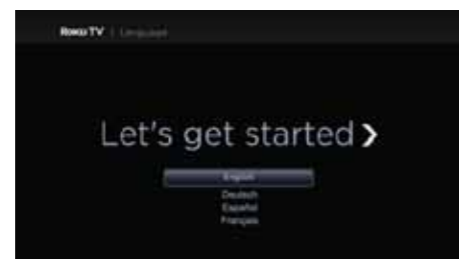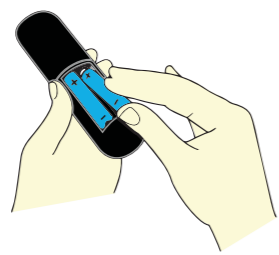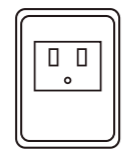

4 COMPLETE GUIDED SETUP (OPTIONAL)

Establish your network connection.

- 1 Your TV automatically detects your wireless network, so have your network name and password handy and follow the easy on-screen instructions.
- 2 You will be prompted to create your Roku account online at <https://my.roku.com/link>. Your TV generates a unique code that links your TV to your new account.

Note: Roku accounts are free, and while a valid credit card number is not required, providing your card information makes renting and purchasing entertainment a breeze. You aren't charged unless you agree to the terms and cost of the content.

- 3 After your TV is connected to your account, it automatically updates with the latest software, then you can start streaming immediately.
- 4 If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.


Note: Roku does not charge for activation support – beware of scams.

5 OPTIONAL

Watching local broadcast TV. How do I scan for channels?

If you connected a cable or satellite box, skip this step.

If you connected to an antenna or cable wall jack (no box):

- 1 When the setup wizard is complete, select the ANTENNA  TV tile from the Home screen.
- 2 Follow the on-screen instructions.
- 3 Whenever you want to watch TV, select this tile.



SHARP • Roku TV

TROUBLESHOOTING

Having trouble completing the guided setup?
Don't worry, it's usually an easy fix.

- If you can't see a picture on your TV**
- Make sure that your TV and the device you want to watch (like a cable box, Blu-ray player, or game console, etc.) are turned on and plugged into a working wall outlet.
 - Make sure that your power cable is connected.

If you can't connect to your wireless home network during guided setup

- Make sure that you selected the correct wireless network name.
- Make sure that you entered the wireless network password correctly (the password is case sensitive).
- Improve the wireless signal by rotating the router slightly (even a few inches can help).

If you can't hear sound

- Make sure that the TV volume is turned up and not on mute.
- Try using only the TV speakers. Disconnect any audio devices (like headphones or AV receivers).

If the TV remote control isn't working

- Remove any obstruction and point the remote at the TV's remote control sensor (see Features).
- Try a fresh set of batteries.
- If the status light on the front of your TV flashes once each time you press a remote button, the problem is not with the remote.
- Unplug your TV and plug it back in.

One-year limited warranty

Visit <https://www.sharptvusa.com/support>

Need additional help?

See your online *User Guide!* This comprehensive guide includes everything from basic how-to steps to more advanced features.

Go to: <https://www.sharptvusa.com/support>
Find your model. Under Owners Manual, find the language you want, then select Download. Your online *User Guide* opens.

We're here for you.

<https://www.sharptvusa.com/support>

For customer service, call: 1-855-544-2030
©2019 Best Buy China LTD.

All rights reserved. SHARP is a trademark of Sharp Corporation; used under license by Hisense International (Hong Kong) America Investment Co., Limited.

CONNECTING BRINGS OUT YOUR TV'S FULL POTENTIAL!
You'll have access to thousands of streaming channels.*

Make any night a movie night

Access more than 150,000 movies and TV episodes across major streaming services like Netflix, Prime Video, Google Play, CBS All Access, Cineplex Store, and more. Choose from free, rental, and subscription services.*

Get in the groove

Connect your favorite music streaming service to your TV, including Spotify, TuneIn, Deezer, and more.*

Explore your passions

In addition to popular streaming channels like Happy Kids, Viki, and DAZN, your Sharp Roku TV also offers hundreds of streaming channels to fuel your passions – including fitness, kids & family, cooking, sports, religion, outdoors, international programming, and much more.

Enjoy tons of free channels and free trials

Your Sharp Roku TV has hundreds of popular free channels like YouTube, Tubi TV, Bloomberg TV, TED, Deutsche Welle, Sky News, and more. Plus, free trials to popular subscription services like Netflix, Acorn TV, and BritBox.

*Subscription or other payment may be required to access certain channel content. Content may not be available in all areas in which the Sharp Roku TV is sold and channel availability is subject to change.

ROKU, ROKU TV and the ROKU logo are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

USING YOUR REMOTE CONTROL

POWER
Turns your TV on or off.

BACK
Returns to the previous screen.

HOME
Displays your TV's Home screen. Stops playback if you are watching TV or streaming content.

Directional keypad

CHANNEL RECALL/JUMP BACK AND INSTANT REPLAY
Changes to the previous channel when viewing antenna or cable (no set-top box) programming. Jumps back one position in video when viewing streaming content. Backspaces one letter during menu entries, such as Search.

SLEEP
Sets the sleep timer.

REWIND
Rewinds streaming video. Jumps to the previous audio track or selection. Jumps up one page in menus.

PLAY/PAUSE
Plays, pauses, or resumes playback. Activates and uses the Live TV Pause feature when a 16GB USB drive is attached to your TV.

VIEW MORE OPTIONS
Gives you easy access to picture settings, display options, and more. Press * on any screen to access options.

FAST FORWARD
Fast forwards streaming video. Jumps to the next audio track or selection. Jumps down one page in menus.

STREAMING CHANNELS SHORTCUTS
When you press a button:
• If you have not added the channel, displays a sign up page.
• If you have added the channel, displays the channel's home page.
• If your TV is off, turns on your TV and displays the channel's home page.

VOLUME UP
Increases the volume or un-mutes the sound.

VOLUME DOWN
Decreases the volume.

MUTE
Mutes or un-mutes the sound.

Front view

Side view

Using your cable set-top box or satellite receiver remote as a universal remote.

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, refer to the manual that your cable or satellite service provided. It includes instructions on how to program their remote to your TV. You can find codes that work with your Sharp•Roku TV and the most common cable and satellite provider's universal remote controls at www.roku.com/universalremote.